

TRAINING EXERCISE

ADDING A LOGO TO THE HOME SCREEN VIA THE CONTROL PANEL USING AN SD CARD

STEP 1:

To add a logo or message to the Home Screen using the Control Panel, Select User tools/Counter.


Note, before you begin the steps, your graphic must be properly sized, titled and loaded on an SD Card.

- Models with 8.5" screen, graphic must be 324 pixels wide x 66 pixels
- Models with 4.3" screen, graphic must be 180 pixels wide x 40 pixels
- Graphic file must be titled "insert.jpg" and saved on your SD Card in the directory: "custom_uiimage". For example, the path would be "custom_uiimage/insert.jpg". To download a utility that will help you prepare the logo, visit: <http://hornil.com/en/downloads/>



STEP 2:


Select Edit Home.

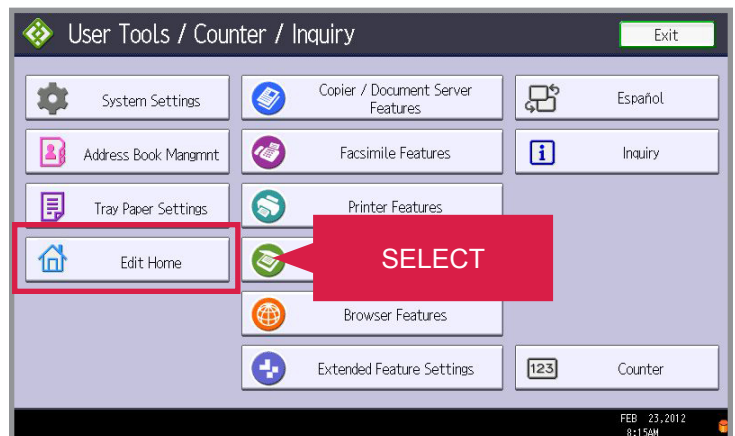

ADDING A LOGO TO THE HOME SCREEN VIA THE CONTROL PANEL USING AN SD CARD


STEP 3:

Select Insert Image on Home Screen. Now insert an SD card with the image of the logo you want to add into the slot on the Control Panel.

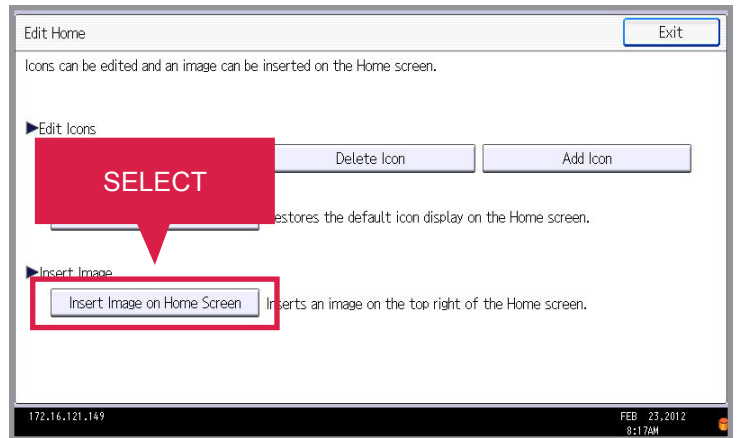


STEP 4:

Select Insert Image on Home Screen.

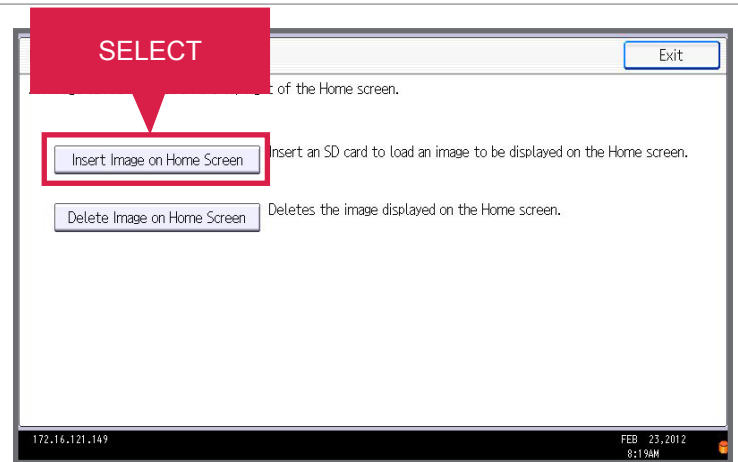

STEP 5:


Select OK.

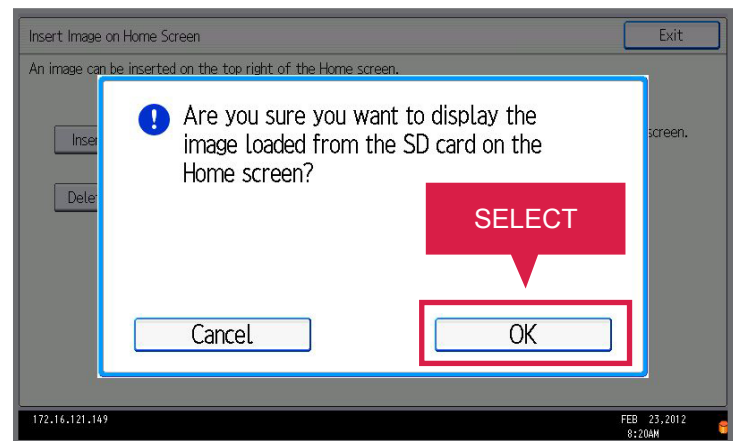

ADDING A LOGO TO THE HOME SCREEN VIA THE CONTROL PANEL USING AN SD CARD

STEP 6:

Select Exit four times and remove the SD card. For demonstration purposes, you only need to click this on-screen demo once.

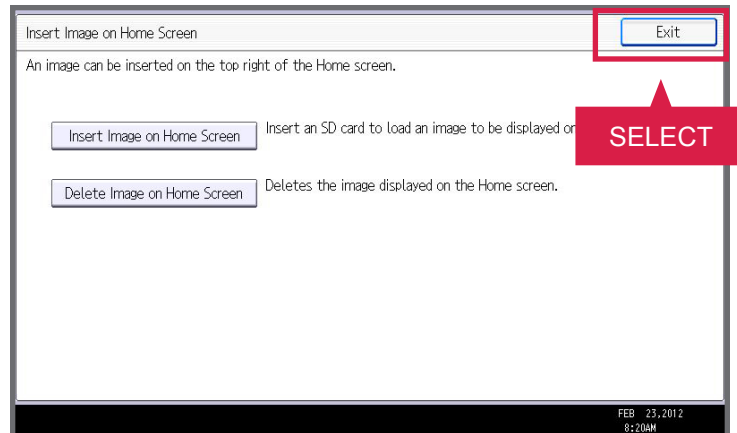

STEP 7:

Your image has now been successfully added to the Control Panel Home Screen.

JOB TASK COMPLETE.

